



Adapter plate for Flexicam - Hasselblad H interface

Instructions



Code: F114



Attention: The digital back has to be mounted with the adapter plate removed from the camera body.

Insert the digital back in the lower plate of the adapter (1), slightly move the back horizontally to center it until it finds lodging in the centering reference points. Gently press the upper part of the digital back close to the adapter plate, do not force it!

Operate the hooking lever placed on the back side of the adapter plate (2) and simultaneously press the back to touch the adapter plate (for the digital backs that have a safety lever, operate this lever at the same time too), release the lever.

Check that the digital back is properly and firmly attached to the adapter.